

**Axcent 3 & 4 – No Mounting Stud Versions**

Place into appropriate cutout and attach with screws as shown (not provided).

**Axcent 1 & 2 – Mounting Stud Versions**

Place into appropriate cutout and attach with washers & thumb nuts as shown.

Max Radius at Corners = 1/8"

Diagram 2  
Cutout for  
Axcent 1 & 3


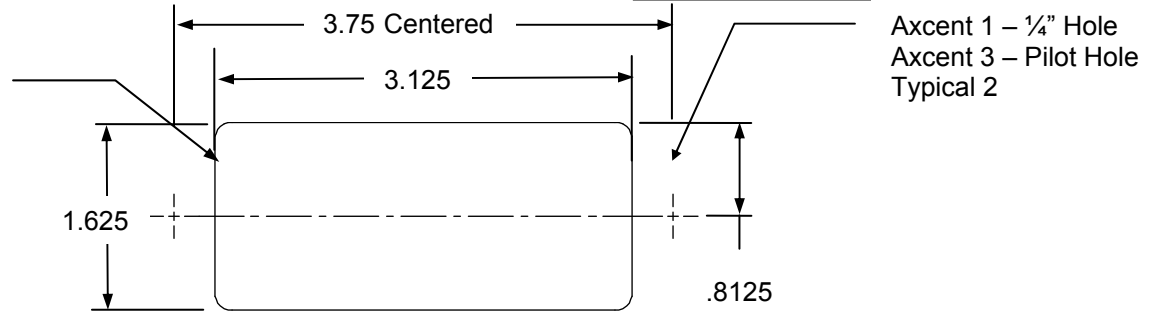


Diagram 3  
Cutout for  
Axcent 2 & 4

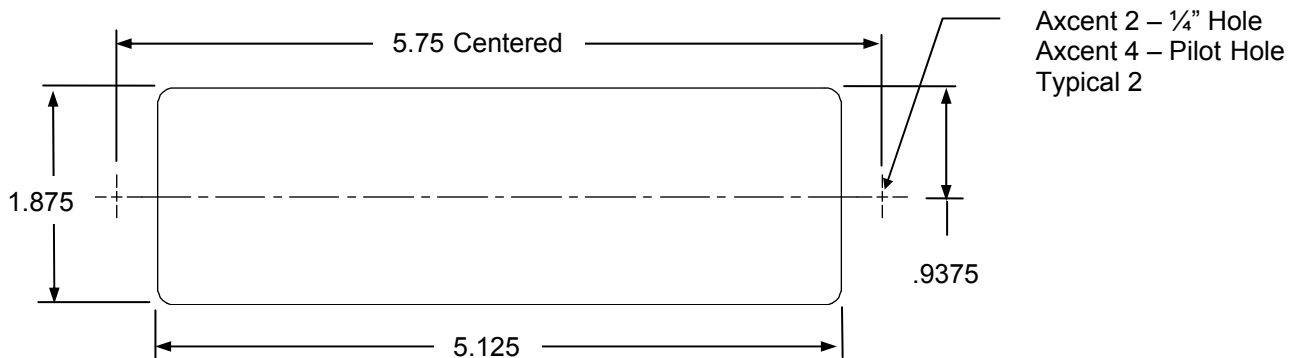

**Installation Instructions**

1. Cutout the surface to the size needed dependent on your application. See diagrams 2 & 3.
2. Install Axcent into opening. On Axcent 1 & 2 remove plastic thumb nuts and washer first.
3.
  - a. For Axcent 1 & 2 reinstall washer & plastic thumb nuts and tighten until Axcent is secure.
  - b. For Axcent 3 & 4 attach Axcent to surface with screws (not provided).
4. Connect power and patch cord as needed.