

# Side Mounted **Brig™** **CPU Holder**

Use for  
Brig™ and Li'l Brig™ models

## Parts

Side Mount Bracket



Bottom Plate  
Attachment Tabs



CPU Security Tabs &  
Self-tapping Screws



10 Euro Screws



## ASSEMBLY & INSTALLATION



4 Carbon Steel Bars



4 bar extensions



Bottom Pan



Top Plate



8 One Way Screws



8 Machine Screws & Beta Clip



## 1. Install Bars in Bottom Pan

Place CPU on bottom pan and determine locations for bar installation. Choose the closest clearance between bars and CPU case.


Using 4 of the 8 black machine screws, install the 4 carbon steel bars. Check to see if the extensions are required. If the CPU case is taller than the bars, use the extensions.



After making this determination, remove the two bars on the right side as you view the unit from the front.

**Install the Bottom Plate Attachment Tabs** to the bottom plate on the right side. These will provide a way to secure the unit to the side of the desk panel.

**ONE WAY SCREWS** may be used if a deterrent to theft is required. Install the screws loose so you can remove them using your fingers. Tighten them when you know everything fits your CPU case.

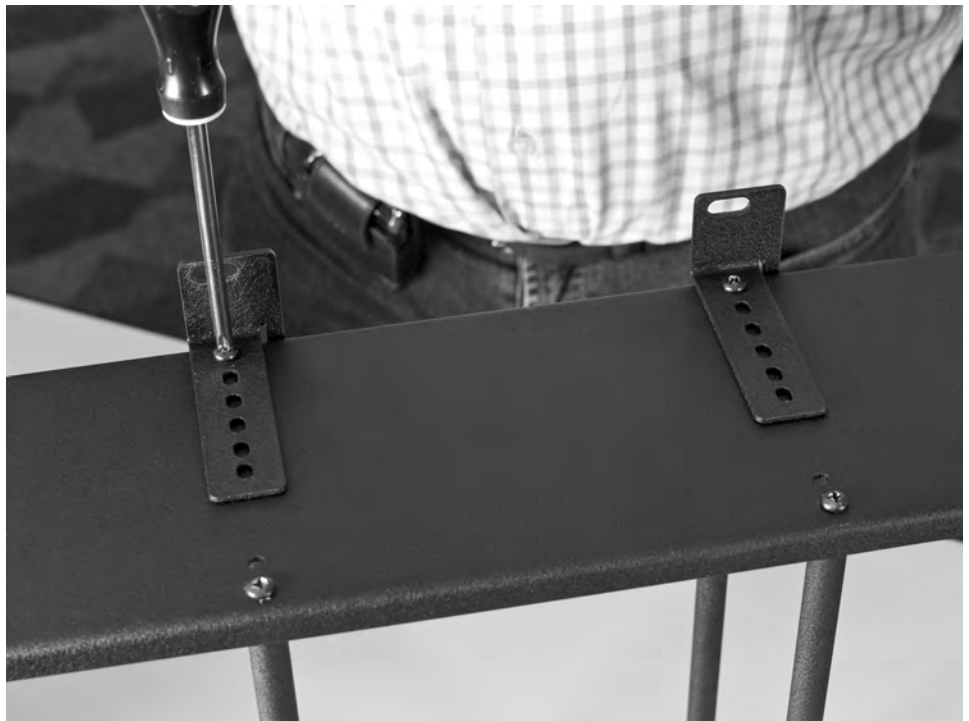

## 2. Install Security Tabs

Use self-tapping metal screws to install security tabs into holes provided in the top and bottom pans at the back edge. This operation requires slow, steady force. Once installed, screws are difficult to remove. Several sets of holes are provided so you can avoid cable routing conflicts. When the top is installed, the CPU is trapped inside



## 3. Install Bars in Top Pan


With bars and security flanges installed, place CPU on bottom pan. Front of CPU should be oriented with curved flanges as shown. If CPU is taller than the bars, screw in bar extensions. Use 4 remaining black machine screws to install top pan onto bars.

**ONE WAY SCREWS** may be used if a deterrent to theft is required. Install the screws loose so you can remove them using your fingers. Tighten them when you know everything fits your CPU case.



#### 4. Install Side Mount Bracket

Use 8 Euro Screws to install using a Phillips #2 drive.

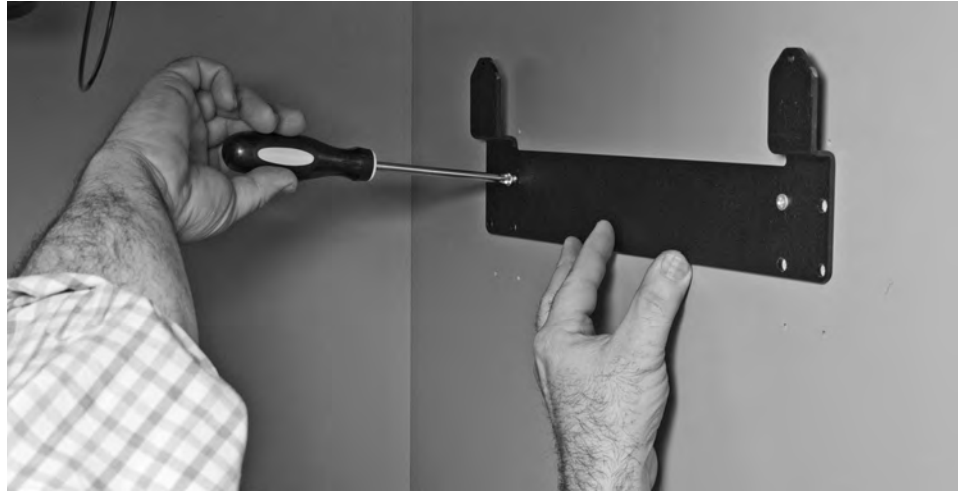

#### 5. Hang Brig & CPU

Slip the side mount bracket tabs through the slots in the top of the Brig's top plate.



#### 5. Secure Brig to the desk panel

Use one Euro Screw, each, for two tabs located on bottom of Brig into pilot holes provided.



CBT Supply, Inc.

800 770 7042

Products for the Net Generation