

# iDrawer

## INSTALLATION

### Tools Required:

- Safety Glasses
- 1/8" drill & depth gauge
- #2 Phillips driver
- Power Drill / Screw Gun
- Tape or Gluestick

### WARNING

Power tools are dangerous. Heed all power tool manufacturer warnings. Wear safety glasses and proper apparel that won't get caught in moving parts. CBT Supply, Inc. will not be held liable for misuse of tools and disregard for power tool manufacturer's safety precautions.




### Tape or gluestick paper template to under side of table top.

The reference line aligns with the user edge of the table top.


Make sure template is positioned squarely in the location desired.

Drill six pilot holes on centers, using 1/8" drill with depth gauge to prevent drilling through table top.

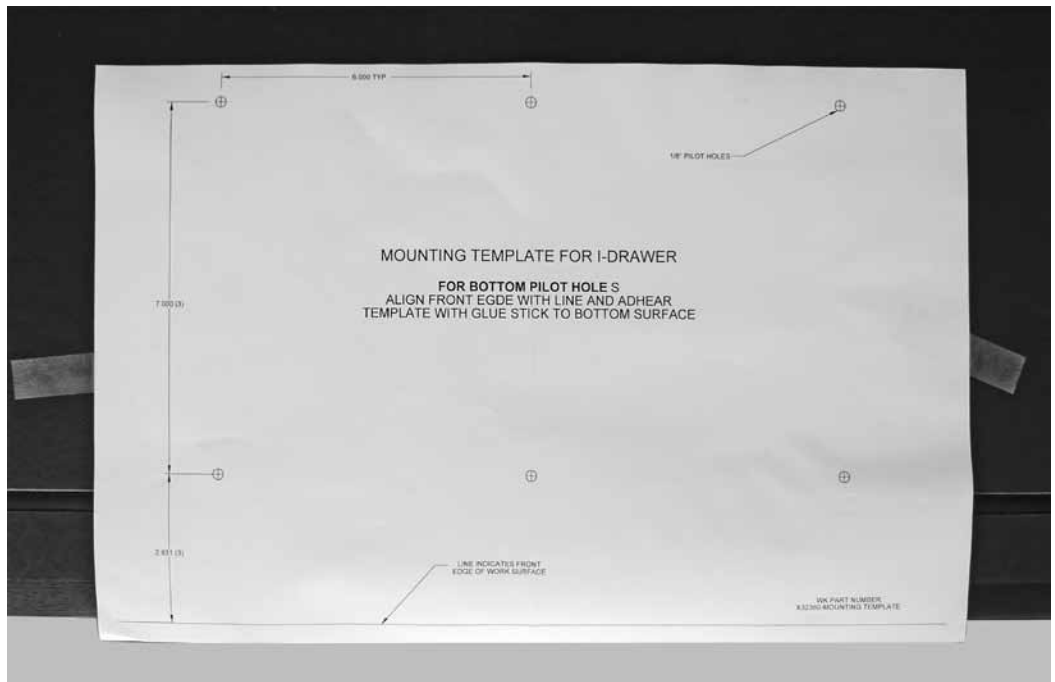


### Remove the iDrawer from the mounting bracket.

Move the release tabs on the drawer slides up or down as required and pull the drawer from the slides.

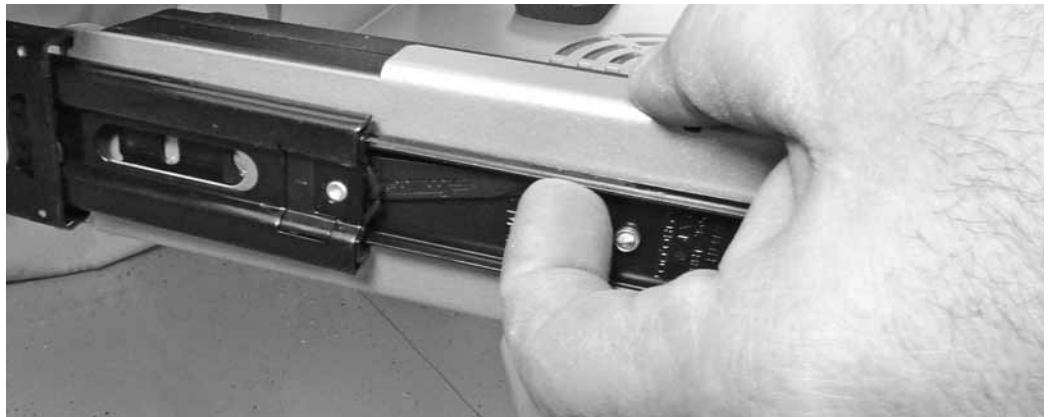

## Install mounting bracket

Using the supplied #8 pan head #2 Phillips drive wood screws, install with screw gun and #2 Phillips bit.

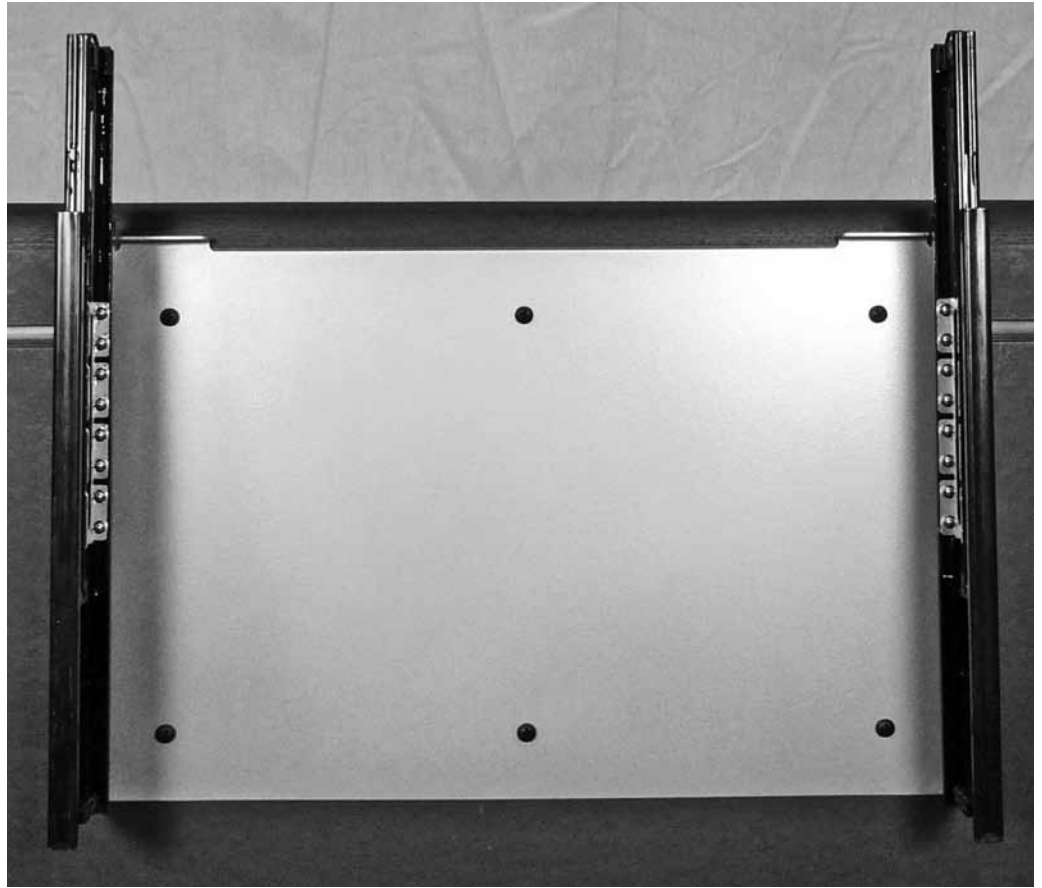

**Install Telecom Plate**  
(If this option was ordered).

**Install pads** to locations shown. Remove adhesive backing and press in place.



## Install iDrawer on its slides

Move the tabs on the drawer slides and push the drawer onto its tracks.

Technical Support: 800-770-7042

